



Assembly Instructions

Adjustment of control shaft for
vehicles with engine type code:


- CAV*
- CTH*
- CKMA

Assembly instructions
Adjustment of control shaft
Engine type code CAV*, CTH*, CKMA



1. Scope of delivery

Please check if delivery is complete before starting the installation. In case the delivery is incomplete, please contact our service team at ABT Sportsline.

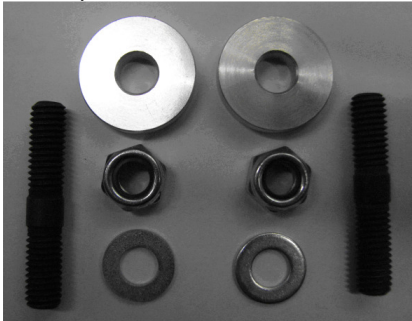


- 2 Studs M6
- 2 Spacers
- 2 Flat washers M6
- 2 Nuts M6

2. Assembly



Remove the induction pipe and the vacuum line.

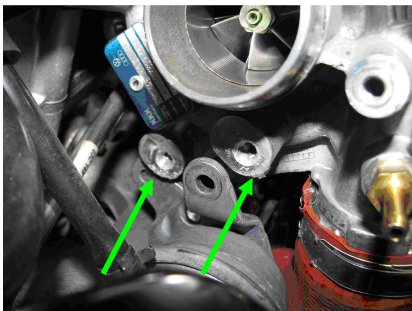


Unscrew the serial screws of the waste gate actuator.

Assembly instructions
Adjustment of control shaft
Engine type code CAV*, CTH*, CKMA



Screw the provided studs.
Put the spacers over the studs.

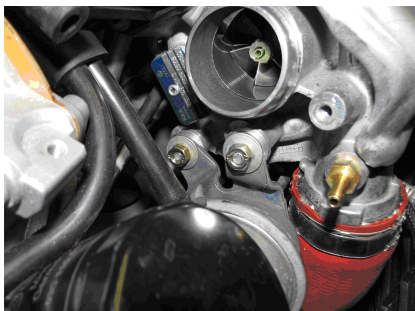

Remount the waste gate actuator and fix it by means of the provided flat washers and nuts. Reattach the induction pipe and the vacuum line. Reattach the rest of the parts.

Assembly instructions
Adjustment of control shaft
Engine type code CAV*, CTH*, CKMA



Abt Sportsline GmbH
Johann-Abt-Str. 2
D-87437 Kempten / Allgäu
Tel.: +49 (0)831 / 5 71 40-0
Fax: +49 (0)831 / 7 26 66
info@abt-sportsline.de
www.abt-sportsline.de