



drill template
battery case PQ 35
VW Beetle / Jetta

Attention:
for printing set in Print Dialog
Page Handling →
Page Scaling →
'None'

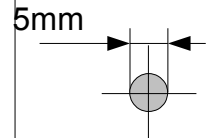

Use drill template only for this
bracket(s):

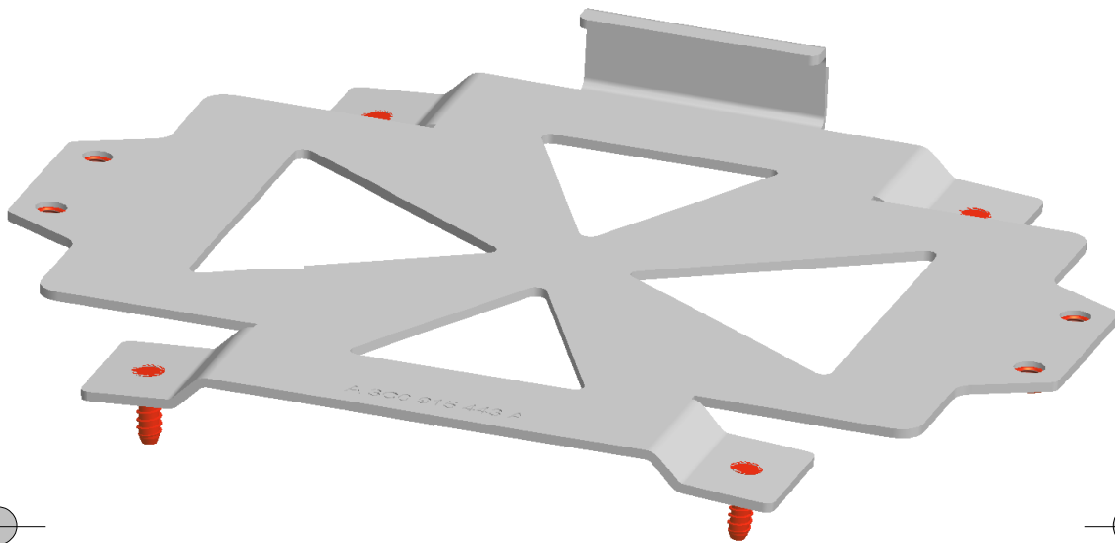

cut hatched areas