



Mounting Instructions ABT Sound Control Golf GTD

Table of contents

1 Hints	3
2 Scope of delivery.....	4
3 Sound Control Installation.....	5
4 Completion.....	11

1 Hints

Mounting Instructions ABT Sound Control Golf GTD

Vehicles: VW Golf GTD 2,0 TDI CUNA

Assembly time: approx. 30 minutes

Attention: To guarantee optimal function and security of the ABT-Soundcontrol it is necessary to thoroughly read through the assembly instructions prior to work and to operate the installation as described.

Important steps to take before assembling the ABT Soundcontrol:

Before starting the installation, the error memory of the vehicle in which the Soundcontrol will be installed has to be read out.




In case of an error log entry:

- Please follow the manufacturer's instructions to resolve errors.
- After the rectification it is necessary to once again take a test drive of minimum 30 km.

Install the ABT Gateway only into vehicles which are error-free at the time of installation.

2 Scope of delivery

Please check the completeness of delivery before starting the installation. In case the delivery is incomplete, please contact ABT Sportsline GmbH.

Quantity	Picture	Description
1		ABT Sound Control
1		wiring harness
1		velcro tape 2 x 2,5cm

3 Sound Control Installation




Overall view of the car trunk.



Remove the trunk cover.



Remove the trunk bottom.

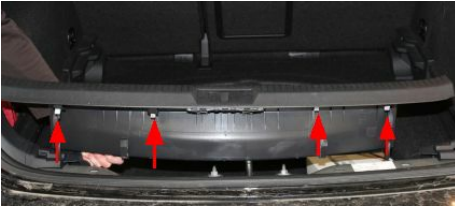

Remove the bottom trunk fairing. The marked clips must unlock.



Unscrew the marked screw at the left trunk fairing.



Remove the left side fairing in the trunk.



Remove the upper trunk fairing. The marked clips must unlock.



Remove the upper-left side fairing in the trunk.



View of the original connected control unit.



Disconnect the plug of the standard wiring harness from the standard control unit.



Connect the plug of the standard wiring harness with the ABT wiring harness.



Connect the Sound Control with the ABT wiring harness.



Connect the plug of the ABT wiring harness with the standard control unit.



Fix the Sound Control with the included velcro tape at the car body.
Stow the wiring harness in the spacing.



4 Completion

Install all standard parts to the vehicle.

Read out the error memory and delete if necessary.

Start the engine and take a test drive.

ABT Sportsline GmbH

Johann-Abt-Str. 2

D-87437 Kempten / Allgäu

Phone: +49 (0)831 / 57140 - 0

Fax: +49 (0)831 / 72666

Email: info@abt-sportsline.de

www.abt-sportsline.de